



BP40-37/BP40-37F

40-pin to 37-pin Connector Map



Use this table to map signals from the 40-pin on-board connector to the to 37-pin male connector on the BP40-37, or to the 37-pin female connector on the BP40-37F.

40-pin connector	37-pin connector
1	1
2	20
3	2
4	21
5	3
6	22
7	4
8	23
9	5
10	24
11	6
12	25
13	7
14	26
15	8
16	27
17	9
18	28
19	10
20	29
21	11
22	30
23	12
24	31
25	13
26	32
27	14
28	33
29	15
30	34
31	16
32	35
33	17
34	36
35	18
36	37
37	19
38	-
39	-
40	-

